 




ABCAT® HOTTUB MANUAL



Congratulations with the purchase of your ABCAT® HOTTUB. In this manual you can find the most important aspects for an optimal and safe use of the ABCAT® HOTTUB.

More information can be found in the ABCAT® HOTTUB handbook. This handbook can be downloaded free of charge via www.ecocat.eu/downloads

1. Safety

- BE CAREFUL: The ABCAT® HOTTUB can be hot!
- The ABCAT® HOTTUB may only be used on stoves that are installed outside.
- The ABCAT® HOTTUB must be professionally installed.
- It is important that the ABCAT® HOTTUB is easily accessible for maintenance.
- Cleaning of the ABCAT® HOTTUB may only be done with a cold, not burning stove.

2. Conditions for the use of the ABCAT® HOTTUB

Chimney: A minimum of 2 meters of flue pipe going straight up after

the ABCAT® HOTTUB must be installed.

Stove: The stove must be fitted with a baffle plate and a door

through which the combustion chamber can be closed.

The air supply must always be fully open.

Fuel: Burn a maximum of 2 kg of wood per 30 minutes, divided

over 3 to 4 pieces of suitable wood. See the ABCAT® HOTTUB

Handbook to read what suitable wood is.

The ABCAT® HOTTUB functions optimally when the stove, chimney, fuel and operation of the stove are well matched. See the ABCAT® HOTTUB handbook for more information.

3. Using the ABCAT® HOTTUB

Always light the fire top-down with sufficient kindling. Refill when the last flames are almost extinguished, or when the smoke regains its odor and color. Do not use more than 2 kg of wood *per half hour*. See the ABCAT® HOTTUB handbook for more details.

4. Cleaning the ABCAT® HOTTUB

The ABCAT® HOTTUB is cleaned by rinsing it with warm water. The frequency depends on different aspects, more details can be read in the ABCAT® HOTTUB handbook. Clean the ABCAT® HOTTUB at least when ash is removed from the stove. More frequent cleaning is recommended for an optimal performance of the ABCAT® HOTTUB.